
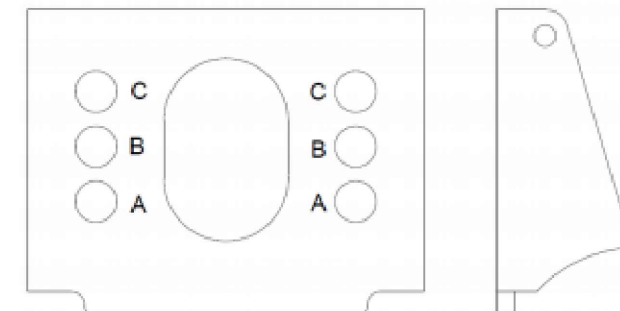


Torque Notes

Part Name	Size and Thread	Torque
Brake Air Chamber	5/8-11UNC	100-115ft. - lbs.

PARTS LIST

ITEM	PART NUMBER	Fuwa P/N	DESCRIPTION	QTY
1	VE-BC3030C		3030 Std Stroke Brake Chamber w/ MTG Nuts	1

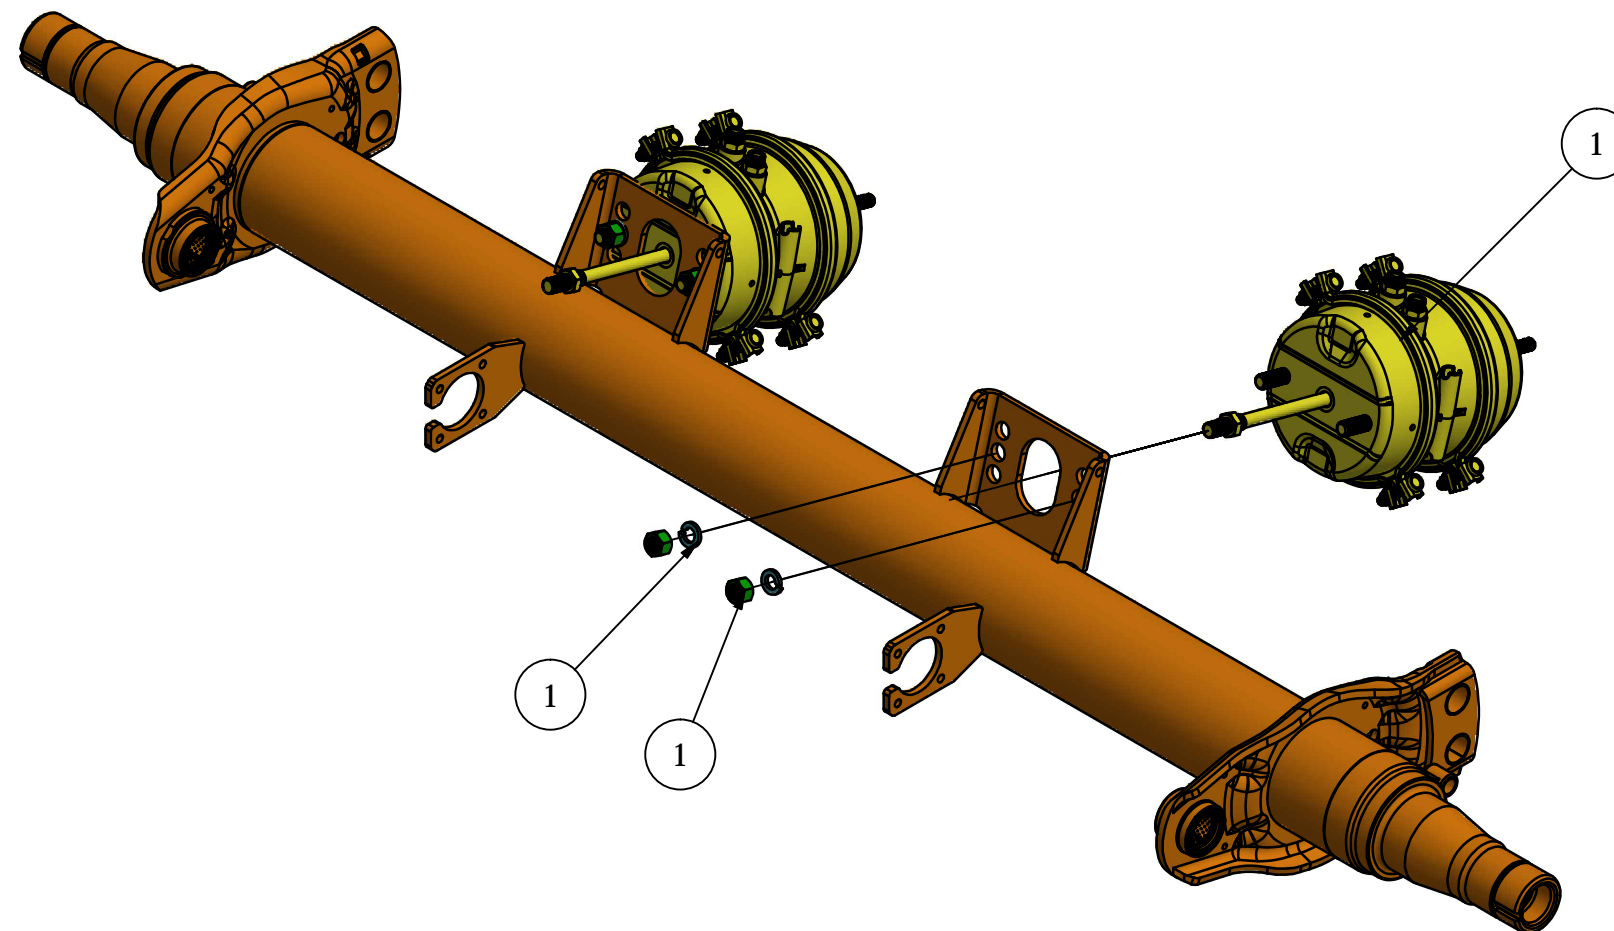


Air Chamber Mounting Locations	Slack Adjuster Length
A-A	5"
B-B	6"
C-C	7"
B-A or A-B	5.5"
B-C or C-B	6.5"

Figure 2.4

Installation Instructions:

1. When air brake chambers are replaced, the correct mounting holes must be used to correspond to brake adjuster length.
2. Connect slack adjuster to brake chamber pushrod
3. Adjust brakes as outlined in brake adjustment procedures

NOTE: To ensure brakes meet F.M.V.S.S. 121 performance requirements, Cush recommends that only original equipment brake components be used.

DCN#	REV	REVISION DESCRIPTION	DATE	BY	CHK	APP
DRAFTSMAN: DJW	9/3/2014	TITLE:	 <p>Nixa, MO, USA PHONE: 417-724-1239 www.cushcorp.com</p>			
CHECKED: CHK		ONE ABS BRAKE CHAMBER 3030 STD STROKE				
RELEASED: APP		TOLERANCE UNLESS OTHERWISE STATED: .XX = +/- .062 FRACTIONS = +/- 1/16 .XXX = +/- .031 ANGLES = +/- 1°				
WEIGHT: N/A						
MATERIAL:						
All of the Information shown herein is the intellectual property of Cush Corp and is submitted only on a confidential basis. The recipient agrees that no disclosure of this information will be made to a third party without written consent of Cush Corp.		PROJECT NO:	SHEET:	SCALE:	REV:	PART/DRAWING NO:
		14090	1 OF 1	A-SIZE: NTS B-SIZE: 1/8 D-SIZE: 1/X	-	X0016-3030